



Warning notices wrong handling

Don't lift the load with the vacuum lifting device if:

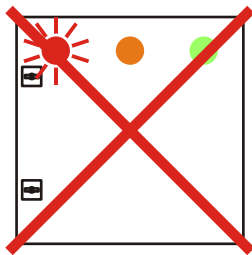


Red lamp shine

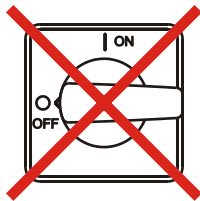


device switched off



Voltage < 24V

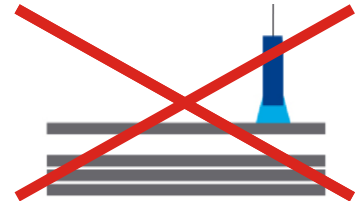

Wall panel: Locking bolt for rotation connected

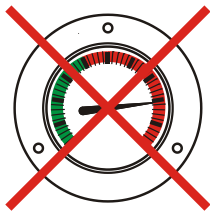

needle in the red area



siren sounds




ice or snow on the surface

Additional dangers by working with the vacuum lifting device:




Don't stay under the hanging load

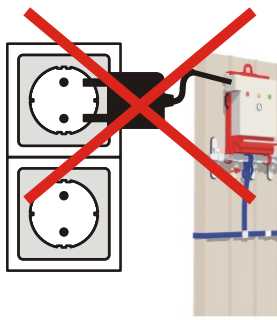


Don't work with the device if the plug is connected



Don't work without safety belts

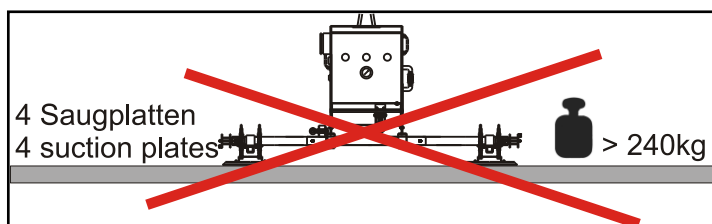




Don't lift more than the load bearing capacity written on the type plate.

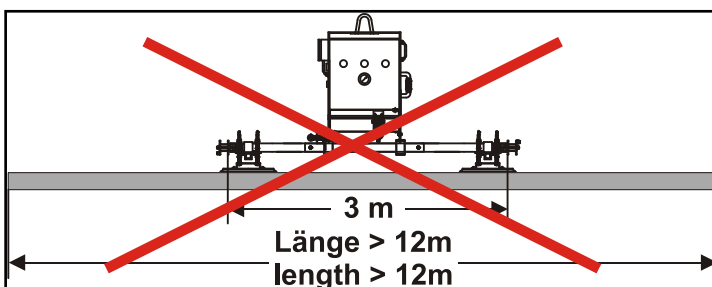



The load may not be longer than the indicated length in the documentation.

Lifting wall panels

Pull out the locking bolt and engage in the appropriate receiver (unlocking) (a).

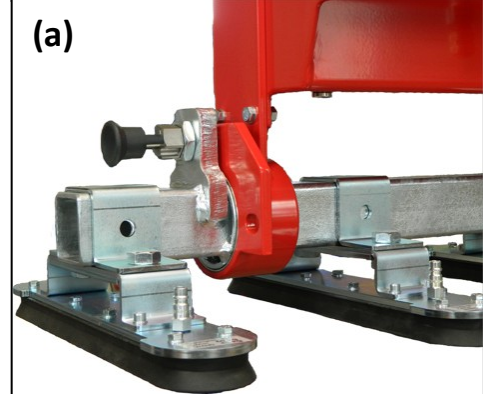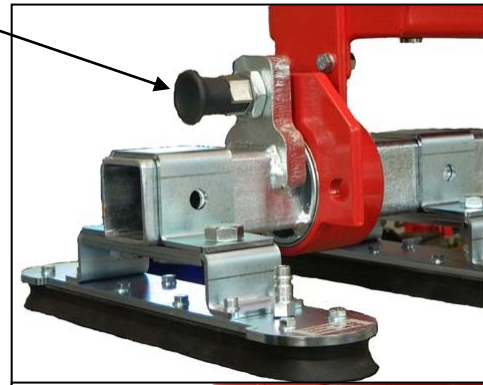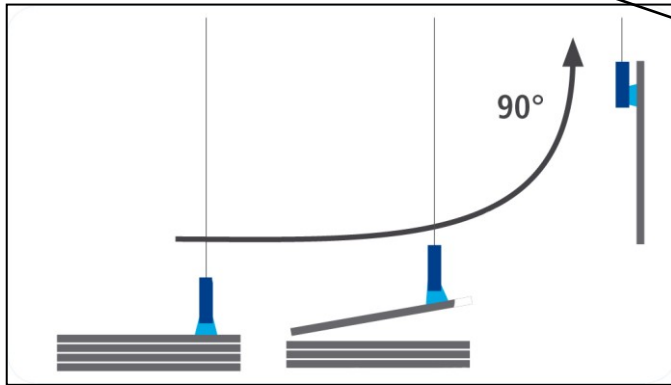

Rotate the main beam and transported material. Reactivate the locking mechanism if required. (b).

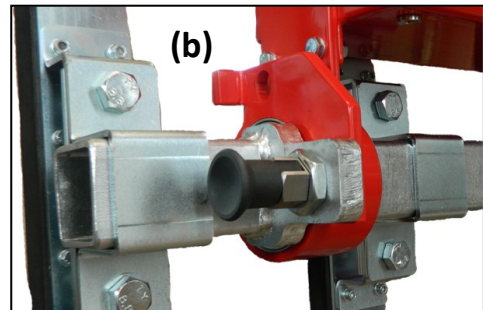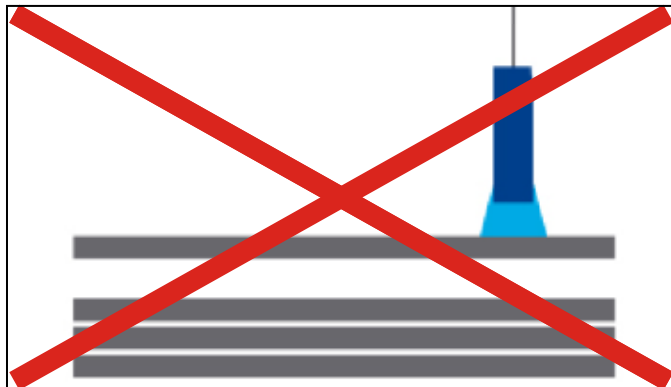

Only lift wall panels with unlocked locking bolt